







LINETRAXX® CTUB100 series

AC/DC sensitive measuring current transformers (type B)

Intended use

The AC/DC sensitive measuring current transformers (type B) of the CTUB100 series convert system leakage and fault currents into an evaluable measurement signal. The devices are suitable for detecting fault currents with smooth DC components. They consist of a CTBC... measuring current transformer core and a CTUB10... electronic module, which can be combined to suit the application. The measuring current transformers can be used in DC, AC, and 3(N)AC systems. The measurement signal is evaluated using devices of the RCMA4..., RCMS4..., RCMB4... or MRCDB4... series, respectively EDS440/441-LAB series, to which the measuring current transformers are connected.

General safety instructions

Part of the device documentation in addition to this manual is the enclosed "Important safety instructions for Bender products".

Installation, connection and commissioning are to be carried out by electrically skilled persons only!

It is essential to follow the existing safety instructions.



DANGER! indicates a high risk of danger that will result in death or serious injury if not avoided.



CAUTION! indicates a low-level risk that can result in minor or moderate injury or damage to property if not avoided.

This symbol refers to information that is designed to help you make the best use of the product.



Device features

- Multicolour LED for operation, fault and status messages
- Electronic module can be exchanged without mechanical separation of the primary conductors
- Extension/retrofitting or modification of functionalities possible in case of changed monitoring requirements
- Insensitive to load currents due to full magnetic shield, can be used for high short-term systemrelated load currents (for CTBC...P only).
- Monitoring of the connection to the measuring current transformer

Overview: Possible combinations of evaluator, electronic module and measuring current transformer core


Electronic modul	Evaluator	Meas. current transformer core	Connecting cable	Supply voltage
	RCMA420	CTBC20(P)60(P)		DC ±12 V
CTUB101	RCMA423	CTBC20(P)210(P)	CTX (6 wires)	The evaluator supplies the measuring current transformer.
	RCMS460/490*	CTBC20(P)210(P)	(TX (5/6 wires)	DC ±12 V External power supply unit AN420
CTUB102	RCMS460/490	CTBC20(P)210(P)	CTVC (4 :)	24 V
CTUB104	EDS440/441-LAB	CTBC20(P)60(P)	CTXS (4 wires)	External power supply unit


^{*} Only recommended for retrofit if an AN420 power supply unit is already available. In this case, if the ready-made connecting cable CTX... is used, the green plugs of the connecting cable (on the evaluator side) must be removed.

Afterwards, the individual conductors must be crimped and connected to the RCMS460/490 or the AN420. In this case, the conductor "T" is not used





Dimension diagrams

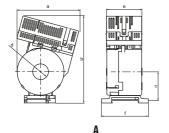

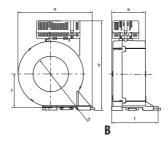


Dimensions (mm), Tolerance: ±0.5 mm

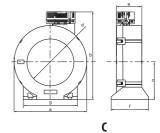

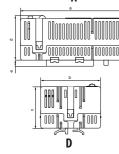


	Туре	a	b	С	d	e	f	g
Α	CTUBCTBC20(P)	75	83	37	ø 20	46	60.5	-
А	CTUBCTBC35(P)	97	130	47	ø 35	46	61	-
В	CTUBCTBC60(P)	126	151	57	ø 60	56	78	_
C	CTUBCTBC120(P)	188	225	96	ø 120	65	96	139
C	CTUBCTBC210(P)	302	339	153	ø 210	67	113	277
D	CTUB	74	44	30	32	4.6	-	_

Mountings (mm)

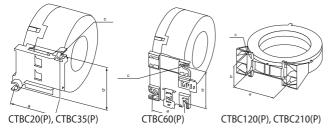

Туре	a	b	С
CTBC20(P)	31.4	49	2 x ø 5.5
CTBC35(P)	49.8	49	2 x ø 5.5
CTBC60(P)	56	66	3 x ø 6.5
CTBC120(P)	103	81	4 x ø 6.5
CTBC210(P)	180	98	4 x ø 6.5

Assembly

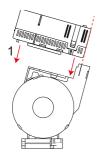



i

Avoid repeated plugging and unplugging of the electronics (10 plugging cycles).



Device view

1	lo.	CTUB101	CTUB102	CTUB104	Note	
1			S1 (k)	•	Connection measuring	1 2 3 4
2			S2 (I)		current transformer core	BENDER 4
3			-		Not in use	5 6 7 8
4	Terminal		-		Not iii use	.
5	Tem	+12 V	24 V	24 V		11 10 9
6			GND		Supply voltage $U_{_{\rm S}}$	
7		-12 V	-	-		0 00 00
8		T	-	-	Connection external test	000000000000000000000000000000000000000
	9		Test button T		a) Offset calibration * b) Internal functional test **	
	10		Combined LEC)	Lights green normal operation Flashes red device error ***	n
					Response value RCM	1 Measuring range peak
		Potenti- ometer for			$I_{\Delta n} \leq 0.1 \mathrm{A}$	0900 mA
	11	adjusting	_	_	$\boxed{ \bigcirc \bigcirc } \qquad 0.1 \text{ A} < I_{\Delta n} \leq 0.5 \text{ A}$	03.5 A
		the measuring			$I_{\Delta n} > 0.5 \text{ A}$	020 A
		range			Select the measuring range accorrange is selected, the accuracy wi	ording to the response value $I_{\rm dn}$ set on the RCM evaluator. If a larger measuring vill decrease.

* Test button T: Offset calibration

For measuring current transformer cores with an internal diameter ≥ 120 mm, an offset calibration should always be carried out before the first commissioning. Note that during the offset calibration the system is switched off and no current flows through the measuring current transformer.

Offset calibration sequence

	Action	LED
1	Install the measuring current transformer in the system, assemble the electronic module and the measuring current transformer core, U_{ς} disconnected	off
2	Press and hold the "T" button	off

	Action	LED
3a		lights red permanently (not ready for operation)
3b	Press and hold "T", supply the electronic module with supply voltage $U_{\rm S}$	flashes red slowly after approx. 2 s (ready for calibration)
3с		flashes red quickly after a total of 5 s (calibration mode)
4	Start calibration: release "T" when the LED flashes red quickly	flashes red quickly
5	Calibration in progress	flashes red quickly
6a	Calibration successful, values are accepted	lights green permanently
6b	Calibration not successful. Calibration value is not accepted. The device is in an error state. Either carry out another offset measurement or clear the error by switching the device off and on again.	flashes red slowly




** Test button T: Internal functional test

Press test button "T" for 5...10 s

When the LED flashes green quickly, release the button. Function test begins, varying measured values are output. Their amplitude depends on the setting of the detent potentiometer.

After completion of the function test, the LED lights up green.

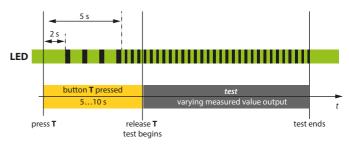

*** Device error

In the event of a device error, a high DC residual current (in the level of the respective measuring range end value) is additionally output so that the error is visible at the evaluator.

Possible cause of error	Action	
Connection between CTUB and CTBC is not correct	Check connection or disconnect CTUB and CTBC and reconnect	
Error after offset calibration (possibly system not switched off and therefore DC residual current too high)	Either carry out an offset calibration again or clear the error by switching the device off and on again. either carry out an offset calibration again or clear the error by switching the device off and on again	
Supply voltage U_s incorrect $(\pm 12 \text{ V or } 24 \text{ V})$	Apply correct supply voltage $U_{\rm s}$	

Possible cause of error	Action
Detent potentiometer (11) is not correctly engaged in one position, but is between two positions	Engage the detent potentiometer correctly
Detent potentiometer is not set correctly, evaluators display error E.01 (CT error)	Set correct response value on detent potentiometer

If the fault cannot be eliminated, contact Bender Service.

Wiring diagrams



DANGER OF ELECTROCATION DUE to electric shock!Touching live parts of the system carries the risk of:

- An electric shock
- Damage to the electrical installation
- Destruction of the device

Before installing and connecting the device, make sure that the installation has been deenergised. Observe the rules for working on electrical installations. Observe the information on rated voltage and supply voltage specified in the technical data!

Application in railway vehicles/ DIN EN 45545-2:2016!


If the horizontal or vertical distance to adjacent components which do notmeet the requirements in table 2 of DIN EN 45545-2 is less than 20 mm orless than 200 mm respectively, they are to be regarded as grouped. Refer to DIN EN 45545-2 chapter 4.3 Grouping rules.

The wires can be routed in any direction.

Connect the device according to the wiring diagram. Please observe the technical data.



Wiring diagram

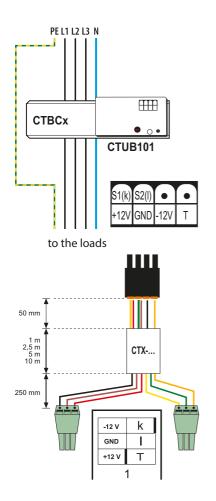


The use of a type 2 surge protection device (SPD) is mandatory due to possible impulse voltages and in order to comply with normative requirements. The surge protection device must be connected upstream of the power supply unit on the supply side (not required for CTUB104).

Features of the surge protection device:

- Nominal discharge current / (8/20 μs): 20 kA
- Response time: 25 ns
- two-stage: 1 varistor + 1 spark gab

Alternatively, the power supply unit must be connected to a CAT II supply without a surge protection device.

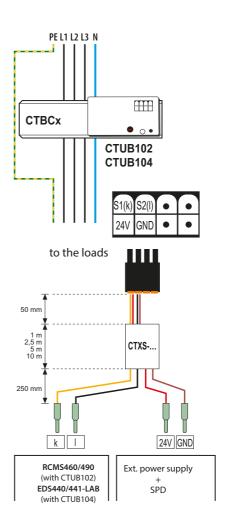



CAUTION!

When using several CTUB100 measuring current transformers, the power supply (24V, GND) must not be daisy-chained from current transformer to current transformer but should be star-shaped (e.g. using a potential distributor).



Installation instructions measuring current transformer



CAUTION! Existing protective conductors and low-resistance conductor loops must not be routed through the measuring current transformer!

Otherwise, high currents could be induced into the conductor loop due to the AC/DC sensitive measuring technology used.




Caution! The connecting cable (supply, secondary connection etc.) must not be routed directly past the current transformer core, otherwise interference pulses may occur.



CAUTION! The measuring current transformer must be connected to the corresponding evaluator before the first use and before commissioning of the monitored installation.



Pay attention to the following:

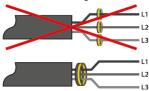

All current-carrying cables must be routed through the measuring current transformer.


Technical data

Insulation coordination acc. to IEC 60664-1/IEC 60664-3


Definitions
Measuring circuit (IC1)
primary conductors routed through the current transformer
Secondary (IC2) connections terminal block
Rated voltage800 V
Overvoltage category III
Area of application ≤ 2000 m AMSL
Rated impulse voltage (IC1/IC2)8 kV
Rated insulation voltage (reinforced insulation; IC1/IC2)
800 V
Pollution degree2

Supply voltage CTUR101

05101	
Description+	+12 V, GND, -12 V
Cupply voltage //	DC ±12 V

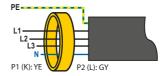


Never route an existing protective conductor through the measuring current transformer.

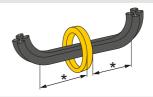

The primary conductors may only be bent from the specified minimum distance. The minimum bending radius specified by the manufacturers for the conductors used must be observed.

* Distance to 90° angle = 2 x outer diameter.

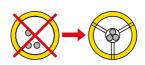

The cables must be aligned with the centre of the measuring current transformer.

±2 %
≤1%
≤ 2.5 W
24 V, GND
DC 24 V
±20 %
≤1%
≤ 2.5 W
1 A for 1 ms

Rated current /RCM application / MRCD application



CTBC35 at $I_{\Delta n} \ge 30 \text{ mA}$		Long-term storage (IEC 60721-3-1)1K22
CTBC35 at $I_{\Delta n} \ge 300 \text{ mA}$	160 A / 125 A	Classification of mechanical conditions acc. to IEC 60721
CTBC35P		Stationary use (IEC 60721-3-3)
CTBC60 at $I_{\Delta n} \ge 30 \text{ mA}$		Transport (IEC 60721-3-2)
CTBC60 at $I_{\Delta n} \ge 300 \text{ mA}$		Long-term storage (IEC 60721-3-1)
CTBC60P		Connection
CTBC120 at $I_{\Delta n} \geq 100 \text{ mA}$		Max. connection length10 m
CTBC120P at $I_{\Delta n} \ge 100 \text{ mA}$	630 A / 630 A	Connecting cables are optionally available.
CTBC210 at $I_{\Delta n} \ge 300 \text{ mA}$	630 A / 630 A	Use 60/75 ℃ copper lines only.
CTBC210P at $I_{\Delta n} \ge 100 \text{ mA}$	630 A / 630 A	Terminal block
CTBC210P at $I_{\Delta n}^{\text{max}} \ge 300 \text{ mA}$	1000 A / 1000 A	Manufacturer Phoenix Contact
Measurement accuracy ±1	% of full scale value	TypeDFMC 1.5/4-ST-3.5 BK
Test winding	yes	The connection conditions of the manufacturer apply.
Rated continuous thermal current 1) I _{cth}	125 A	Connection properties
at UL applications	30 A	rigid 0.21.5 mm² (AWG 2416)
Rated short-time thermal current 1) I _{th}	2.4 kA/1 s	flexible0.2 1.5 mm ²
Rated dynamic current 1) I dyn	6 kA/40 ms	with ferrule 0.250.75 mm ²
		Mounting CTBC
Possible response values (set on the evaluator) CTBC20, CTBC20P		Screw type
CTBC35, CTBC35P, CTBC60, CTBC60P		CTBC2060(P) DIN EN ISO 7045 - M5
CTBC120, CTBC120P, CTBC210P		CTBC120210(P) DIN EN ISO 7045 - M6
CTBC210		Washer type
	500 11111 10 71	CTBC2060(P) DIN EN ISO 7089/7090 - 5
Measuring ranges CTUB101, CTUB102	0 000 m \ (noak)	CTBC120210(P) DIN EN ISO 7089/7090 - 6
Measuring range 1 ($I_{\Delta n} \le 0.1 \text{ A}$)	0900 IIIA (peak)	Tightening torque
Measuring range 3 ($I_{\Delta n} > 0.5 \text{ A}$)	0	CTBC2035 (P)
	020 A (pcak)	CTBC60210(P) 1 Nm
Measuring range CTUB104 Measuring range	DC 0 70 mA	Other
	DC 0/0 IIIA	Operating modecontinuous operation
Indication	2/4	Mounting any position
Multicolour LED	see pages 3/4	Degree of protection, built-in components (DIN EN 60529)IP40
Output	C1 (I.) C2 (I)	Degree of protection, terminals (DIN EN 60529)
Name		Flammability class
Scaling Max. voltage		Software
Max. connector length		Weight
Output resistance		CTUB10x-CTBC20≤ 230 g CTUB10x-CTBC20P≤ 290 q
		CTUB10x-CTBC20r ≤ 290 g CTUB10x-CTBC35≤ 310 q
NameT	(for CTUD101 only)	CTUB10x-CTBC35≤ 310 g CTUB10x-CTBC35P≤ 390 q
Current load		3
	> 300 IIIA	CTUB10x-CTBC60≤ 530 g
Environment/EMC	IEC (2020 4	CTUB10x-CTBC60P≤ 690 g
EMC (CTUB101, CTUB102)		CTUB10x-CTBC120≤ 1460 g
EMC (CTUB104)		CTUB10x-CTBC120P≤ 1820 g
Operating temperature		CTUB10x-CTBC210≤ 4290 g CTUB10x-CTBC210P≤ 4940 g
Classification of climatic conditions acc. to IEC	50721	The use of the power supply units listed at "Accessories" is
(except condensation and formation of ice)	21/24	recommended. The use of a surge protection device is mandatory for
Stationary use (IEC 60721-3-3)		these power supply units (not required for CTUB104).
Transport (IEC 60721-3-2)	ZK11	



Ordering details

U _s	ø CT´s	Shielding	Туре	Art. No.	
Consistent with RCMA420 / RCMA423					
DC ±12V	20 mm		CTUB101-CTBC20	B78120010	
			CTUB101-CTBC20P	B78120020	
	25		CTUB101-CTBC35	B78120012	
	35 mm		CTUB101-CTBC35P	B78120022	
			CTUB101-CTBC60	B78120014	
	60 mm		CTUB101-CTBC60P	B78120024	
	120		CTUB101-CTBC120	B78120016	
	120 mm		CTUB101-CTBC120P	B78120026	
	240		CTUB101-CTBC210	B78120018	
	210 mm		CTUB101-CTBC210P	B78120028	
Consistent with RCMS460 / RCMS490					
20	20 mm		CTUB102-CTBC20	B78120011	
	20 mm		CTUB102-CTBC20P	B78120021	
			CTUR102-CTRC35	R78120013	

DC 24V	20 mm	CTUB102-CTBC20	B78120011
		CTUB102-CTBC20P	B78120021
	25	CTUB102-CTBC35	B78120013
	35 mm	CTUB102-CTBC35P	B78120023
	(0	CTUB102-CTBC60	B78120015
	60 mm	CTUB102-CTBC60P	B78120025
	120 mm	CTUB102-CTBC120	B78120017
	120 111111	CTUB102-CTBC120P	B78120023 B78120015 B78120025
	210 mm	CTUB102-CTBC210	B78120019
		CTUB102-CTBC210P	B78120029

Consistent with EDS440 / EDS441

	20 mm	CTUB104-CTBC20P	B78120033
DC 24 V	35 mm	CTUB104-CTBC35P	B78120034
27 V	60 mm	CTUB104-CTBC60P	B78120035

Accessories

Voltage supply DC 24 V for CTUB102 and CTUB104

max. connected CT´s	Туре	Art. No.
4	STEP-PS/1 AC/24 DC/0.5	B94053110
14	STEP-PS/1 AC/24 DC/1.75	B94053111
34	STEP-PS/1 AC/24 DC/4.2	B94053112

Connecting cables

Length (m)	Connection to	Name	Art. No.
1	RCMA42x	CTX-100	B98110080
2.5		CTX-250	B98110081
5		CTX-500	B98110082
10		CTX-1000	B98110083
1	RCMS46x EDS44x	CTXS-100	B98110090
2.5		CTXS-250	B98110091
5		CTXS-500	B98110092
10		CTXS-1000	B98110093

Replacement parts

Measuring current transformer cores

ø CT´s	Туре	Art. No.
20	CTBC20	B98120001
20 mm	CTBC20P	B98120002
25	CTBC35	B98120003
35 mm	CTBC35P	B98120004
60 mm	CTBC60	B98120005
	CTBC60P	B98120006
120 mm	CTBC120	B98120007
	CTBC120P	B98120020
210 mm	CTBC210	B98120008
	CTBC210P	B98120021

Electronic modules

U _s	Туре	Art. No.
DC ±12 V	CTUB101	B78120050
DC 24 V	CTUB102	B78120051
DC 24 V	CTUB104	B78120053

Required terminals or connecting cables are optionally available.

The measuring current transformers of the CTUB10x series comply with the requirements of the standard DIN EN 45545-2.



Alle Rechte vorbehalten. Nachdruck und Vervielfältigung nur mit Genehmigung des Herausgebers.

Bender GmbH & Co. KG

Postfach 1161 • 35301 Grünberg • Deutschland Londorfer Str. 65 • 35305 Grünberg • Deutschland Tel.: +49 6401 807-0 • Fax: +49 6401 807-259 E-Mail: info@bender.de • www.bender.de









All rights reserved. Reprinting and duplicating only with permission of the publisher.

Bender GmbH & Co. KG

PO Box 1161 • 35301 Grünberg • Germany Londorfer Str. 65 • 35305 Grünberg • Germany Tel.: +49 6401 807-0 • Fax: +49 6401 807-259 F-Mail: info@bender.de • www.bender.de